Atari Punk Console DIY Kit v1.3 Rev:

2025-03-10 23:34:08

	Sourced	Placed	References	Value	Quantity
1	☐	☐	C1, C5, C10, C12, C13, C14	100nF	6
2	☐	☐	C2, C4, C8, C9, C11	10uF	5
3	☐	☐	C3, C7	10nF	2
4	☐	☐	C6	47nF	1
5	☐	☐	R1, R2, R5, R6, R12, R15, R16, R17, R24, R25, R26, R27, R28, R31	10K	14
6	☐	☐	R10, R11, R13, R19, R20, R30, R32, R33, R34	100K	9
7	☐	☐	R9, R14, R18, R21, R22, R23, R29, R37	1K	8
8	☐	☐	R35, R36	22K	2
9	☐	☐	R3	LDR 2	1
10	☐	☐	R4	LDR 1	1
11	☐	☐	R7	1M	1
12	☐	☐	R8	24K	1
13	☐	☐	D2, D4, D6, D8	1N5817	4
14	☐	☐	D3, D5, D7	5.1v	3
15	☐	☐	D1	LED	1
16	☐	☐	U1	NE556	1
17	☐	☐	U2	L78L05_TO92	1
18	☐	☐	U3	LM358	1
19	☐	☐	F1	Polyfuse_Small - 50mA	1
20	☐	☐	Q1, Q2, Q3	2N3904	3
21	☐	☐	G***, G***	LOGO	2
22	☐	☐	RV1	100K - TUNE 1	1
23	☐	☐	RV2	100K - TUNE 2	1
24	☐	☐	RV3	100K - VOLUME	1
25	☐	☐	S1	LDR 2 ON/OFF	1
26	☐	☐	S2	LDR 1 ON/OFF	1
27	☐	☐	S3	Filter On/Off	1
28	☐	☐	S4	BUTTON	1
29	☐	☐	S5	BUTTON - DRONE	1
30	☐	☐	J1	Output	1
31	☐	☐	J2	DC Giriş	1
32	☐	☐	J3	CV 1 IN	1
33	☐	☐	J4	CV 2 IN	1
34	☐	☐	J5	VCA CV IN	1

Negative Pin Square for Led

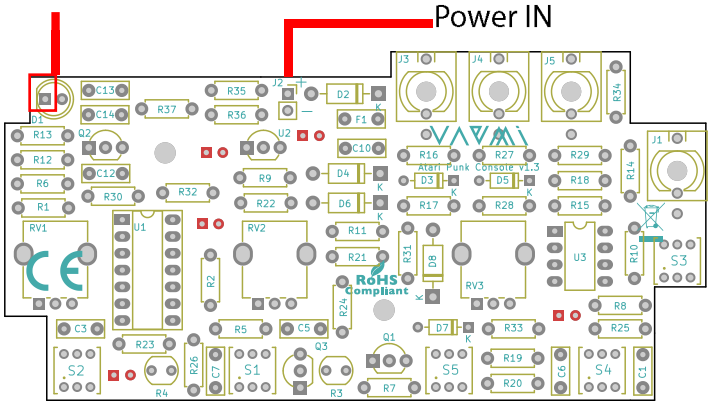

2 x LDR Standoff 11mm
4x m3 screw
2x distans 10mm
4x nut for jack
3x knob
1x DC jack cable twin
1x green cap for switch
4x red cap for switch
1x 9v battery connection
1x IC socket8 pin
1x IC socket 14 pin

S4 momentary push button
The led is red